

Rowlett

Coffee pod machine

Instruction manual



**Model:
DE205**

Safety Instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- Always fill the water tank between the '**MIN**' and '**MAX**' marks.
- NEVER operate the appliance when empty.
- Only fill the water tank with clean and cold water. Never use mineral water, milk or other liquids.
- DO NOT place on or near hot surfaces such as a hob or radiant rings or near a naked flame.
- **Hot beverage inside!** Do not lift the lever during dispensing to avoid injury and burns.
- Do not touch the hot surfaces. Use the lever or buttons only.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Rowlett agent or a recommended qualified technician in order to avoid a hazard.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children shall not play with the appliance.
- DO NOT immerse the appliance in water.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not use outdoors or for commercial purposes.
- Rowlett recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.

- Rowlett recommend that this product is connected to a circuit protected by an appropriate RCD (Residual Current Device).

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Rowlett product.

Pack Contents


The following is included:

- Coffee pod machine
- Instruction manual

Rowlett prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Rowlett dealer immediately.


Operation

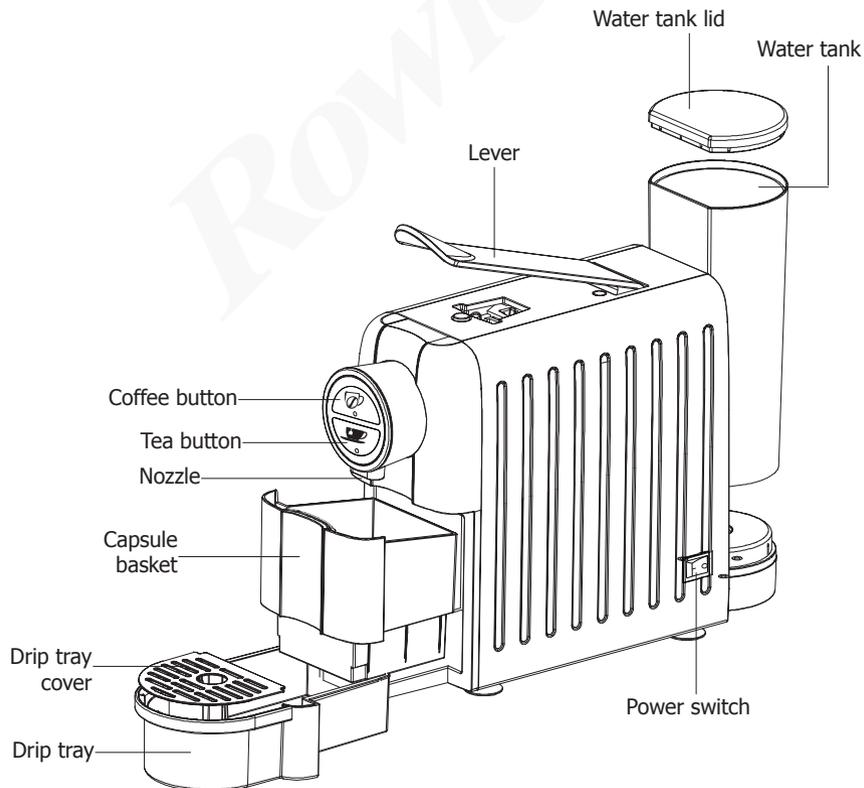

Preparation before first use

Rowlett recommend that the appliance is cleaned out before using for the first time, or if the appliance has been sat unused for an extended period of time.

1. Insert the Capsule Basket into the Drip Tray, then push the drip tray into the appliance. Remove the water tank from its base and fill with water. **Never overfill or fill the tank while seated on the base.**

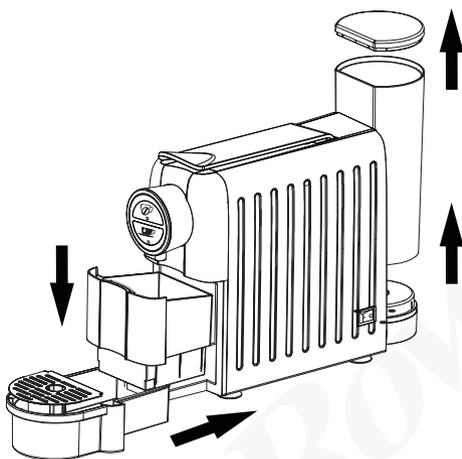

2. Put the water tank back into position. Then place a container on the drip tray.
3. Connect to the mains power supply.
4. Turn the power switch On ("I" position). Both coffee button and tea button will flash, indicating the appliance is warming up.
5. Once the 2 buttons stop flashing and remain on, press the coffee button and wait for the water to dispense. Repeat 5 times to rinse the internal system.




Note: While pressing the Coffee button or Tea button, the appliance may produce a pumping sound, this is normal indicating water is pumped for brewing coffee.

6. Remove the container and discard the water inside. The appliance is now ready for use.

Dispensing coffee or tea

1. Fill the water tank then locate it on the base.
2. Lift the lever and insert a Capsule (compatible with Nespresso Capsules). Then push the Lever down fully.

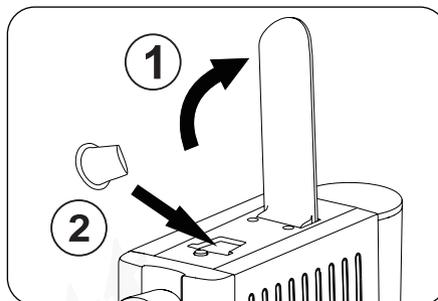

3. Put a cup on the drip tray. Then turn on the appliance to start brewing.

- **After turned on, if the Coffee button and Tea button take turns to flash quickly, the appliance has a lack of water and needs to be refilled.**
- **During brewing, you can press the coffee or tea button to halt the process; press again to continue.**
- **To ensure the best taste and no flavour transfer, always ensure to dispense hot water to rinse the system when switching between coffee and tea.**

4. Wait until the 2 buttons light up and remain on.

5. To dispense coffee:

- Press the Coffee button ONCE to dispense an Espresso, the button will light up and remain on.
- Press the Coffee button TWICE to dispense a Lungo, the button will flash slowly.

5. To dispense tea:

- Press the tea button ONCE to dispense tea.
- **Note:** Tea extracts at a higher temperature than coffee.

6. After use, lift the lever to expel the capsule into the capsule basket. Then push the Lever down fully.
7. Press the coffee button. Hot water will flush through the system then flow into the drip tray. Switch off, unplug and allow to cool before cleaning.

Automatic standby function

In case of inactivity within 10 minutes, the appliance will enter standby mode and the 2 indicator lights will turn off.

- To restart brewing, just press any button.
- To turn off, turn the power switch off ("O" position) and disconnect from the power supply.

Automatic dose function

Auto-dose function ensures drink consistency.

1. Lift the lever and insert a capsule. Then push the Lever down fully. Place a cup on the Drip Tray.

<p>2. Setting Espresso dose:</p> <ul style="list-style-type: none"> • Press the Coffee Button ONCE and hold for 5 seconds, then release. The appliance will start dispensing. • When desired amount is dispensed, press the Coffee Button again to stop. 	<p>2. Setting lungo dose:</p> <ul style="list-style-type: none"> • Press the Coffee Button TWICE and hold for 5 seconds, then release. The appliance will start dispensing. • When desired amount is dispensed, press the Coffee Button again to stop. 	<p>2. Setting tea dose:</p> <ul style="list-style-type: none"> • Press the Tea button ONCE and hold for 5 seconds, then release. The appliance will start dispensing. • When desired amount is dispensed, press the Tea Button again to stop.
---	---	--

3. You have now finished programmed the auto-dose Memory for the desired quantity of beverage.
NOTE: Program will be saved even if the appliance is unplugged or cut off power accidentally.

Automatic dispensing of desired beverage

While the appliance is warming up, you can pre-select your desired beverage. Once warming up is completed, the appliance will automatically dispense the selected beverage (Coffee or Tea).

1. Lift the Lever and insert the capsule. Then close the Lever. Place a cup on the Drip Tray.
2. After turned on, both Coffee and Tea buttons will flash to indicate that the appliance is warming up.
3. While warming up, press the Coffee Button once/twice for Espresso/Lungo, or press the Tea Button once for tea. The selected button will flash and the other button will cease to illuminate.
4. After warmed up, the appliance will automatically dispense the selected beverage.

Cleaning, Care & Maintenance



Always disconnect the appliance from the power supply and let it cool down before cleaning and maintenance.

- Use a damp cloth to clean the exterior of the appliance.
- **Remove the Drip Tray and Capsule Basket assembly, then lift the Capsule Basket out of the Drip Tray. WARNING: Drip Tray will still be hot after use. Handle with care - risk of scalding.**
- Empty and rinse the Drip Tray in the sink to remove any liquid that may have collected.
- Dispose of the used capsules in the capsule basket - check if the pods can be recycled or composted.
- Empty and rinse out the Water Tank after each session.
- Dry all parts thoroughly and re-locate into position.

Descaling program

In hard water areas limescale can build up within the appliance after prolonged use. For best taste and extended appliance life, descale it regularly. Installation of a water filtration system is also recommended.



IMPORTANT:

- **Failure to descale or maintain will invalidate your guarantee.**
- **Always use a suitable descaler for coffee machines and follow the manufacturer's instructions on the container.**

1. Immediately after turned on, if both coffee and tea buttons flash quickly, the appliance needs to descale. Turn the appliance off immediately.
2. Remove the water tank and fill with descaling solution (water and descaler ratio: 4:1).
3. Put the water tank back into position. Then place a container on the drip tray. Ensure the Lever is pushed down fully and no capsule is present.
4. Turn on and wait for the coffee and tea buttons to stop flashing. Press both buttons firmly at the same time and hold for 5 seconds. Both Buttons will now quickly flash.
5. Press the Coffee Button to start descaling. Your machine will dispense. This will continue until the Water Tank is empty. Wait 10 minutes for the Descaling Solution to take effect.
6. Rinse the Water Tank and fill with fresh water. Repeat step 5 (Dispense) and flush at least two full tanks of water through the system to remove any traces of the Descaling Solution.

Note: If turned off in descaling mode, the appliance will stay in this mode when switched back on. To exit the mode, press both Coffee and Tea Buttons at the same time and hold for 5 seconds. Both lights will go back to solid illumination.

7. The appliance is now ready for use again.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Replace plug or lead
	Fuse in the plug has blown	Replace the plug fuse
	Mains Power supply fault	Check Mains Power supply
Loud noise emitted	No water in water tank	Turn Off and refill
Indicator lights come on but no coffee/tea out	Capsule inserted may be faulty	Wait a few seconds, then try again with a new capsule
Water beneath the unit	There will be a small amount of condensation underneath the machine after making numerous beverages. This is safe and does not mean any leakage	
	Water tank may not be seated correctly	Check and locate in place
Capsule fails to go into capsule holder or capsule basket	Capsule basket is full	Empty the basket
	Lever not lifted fully	Lift the lever fully

Technical Specifications

Model	Voltage	Power	Current	Capacity	Dimensions H x W x D mm	Weight
DE205	220-240V~, 50-60Hz	1140-1365W	6A	0.65ml	250 x 109 x 370	3.3kg

Electrical Wiring

This appliance is supplied with a 3 pin BS1363 plug and lead.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



Rowlett parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



Rowlett products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Rowlett. Every effort is made to ensure all details are correct at the time of going to press, however, Rowlett reserves the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento	Model • Modèle • Modell • Modello • Modelo • Malli
Coffee Pod Machine	DE205 (-E)
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) do Conselho	<p>Low Voltage Directive (LVD) - 2014/35/EU Electrical Equipment (Safety) Regulations 2016 EN 60335-1:2012 +A11:2014 +A13:2017 EN 60335-2-15:2016 +A11:2018 EN 62233:2008</p> <p>Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091) EN 55014-1:2017 EN 55014-2:2015 EN IEC 61000-3-2:2019 EN 61000-3-3:2013 +A1:2019</p> <p>Restriction of Hazardous Substances Directive (RoHS) 2015/863 amending Annex II to Directive 2011/65/EU Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032)</p> <p>Ecodesign energy-related products Directive 2009/125 Regulation (EC) 1275/2008 - Standby and off mode power consumption Regulation (EU) 801/2013 - Ecodesign networked equipment, televisions, coffeemakers EN 50564:2011</p>
Producer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante • Nome do fabricante	Rowlett

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

Date • Data • Date • Datum • Data •
Fecha • Data

Signature • Handtekening • Signature •
Unterschrift Firma • Firma • Assinatura

Full Name • Volledige naam • Nom et
prénom • Vollständiger Name • Nome
completo • Nombre completo • Nome
por extenso

Position • Functie • Fonction • Position •
Qualifica • Posición • Função

Producer Address • Adres fabrikant •
Adresse du producteur • Anschrift des
Herstellers • Indirizzo del produttore •
Dirección del fabricante • Morada do
fabricante

15 th April 2021	
DocuSigned by: <i>Ashley Hooper</i> B39382C9FD9C478...	DocuSigned by: <i>Eoghan Donnellan</i> D352874F7FAB460...
Ashley Hooper	Eoghan Donnellan
Technical & Quality Manager	Commercial Manager/ Importer
Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom	Unit 9003 Blarney Business Park Blarney Co. Cork, Ireland





UK	+44 (0)845 146 2887
Eire	
NL	040 – 2628080
FR	01 60 34 28 80
BE-NL	0800-29129
BE-FR	0800-29229
DE	0800 – 1860806
IT	N/A
ES	901-100 133

Rowlett

DE205_EN_A5_v2_20220414